




Start by right clicking on the desktop, select display settings

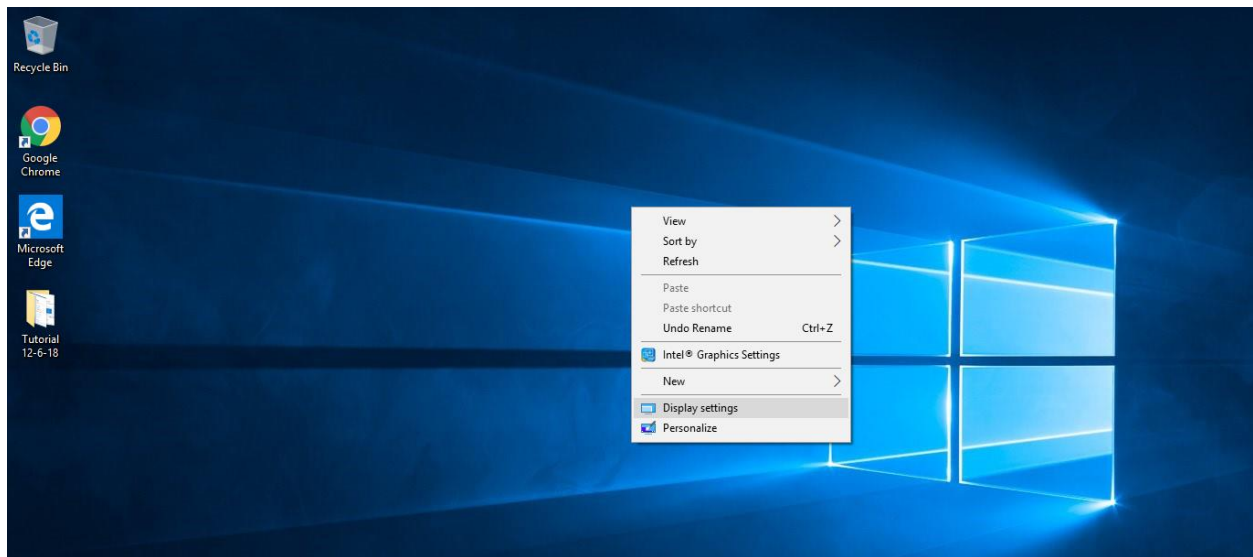


Ensure you can see Display 1 and 2 (They may be different shapes and sizes)

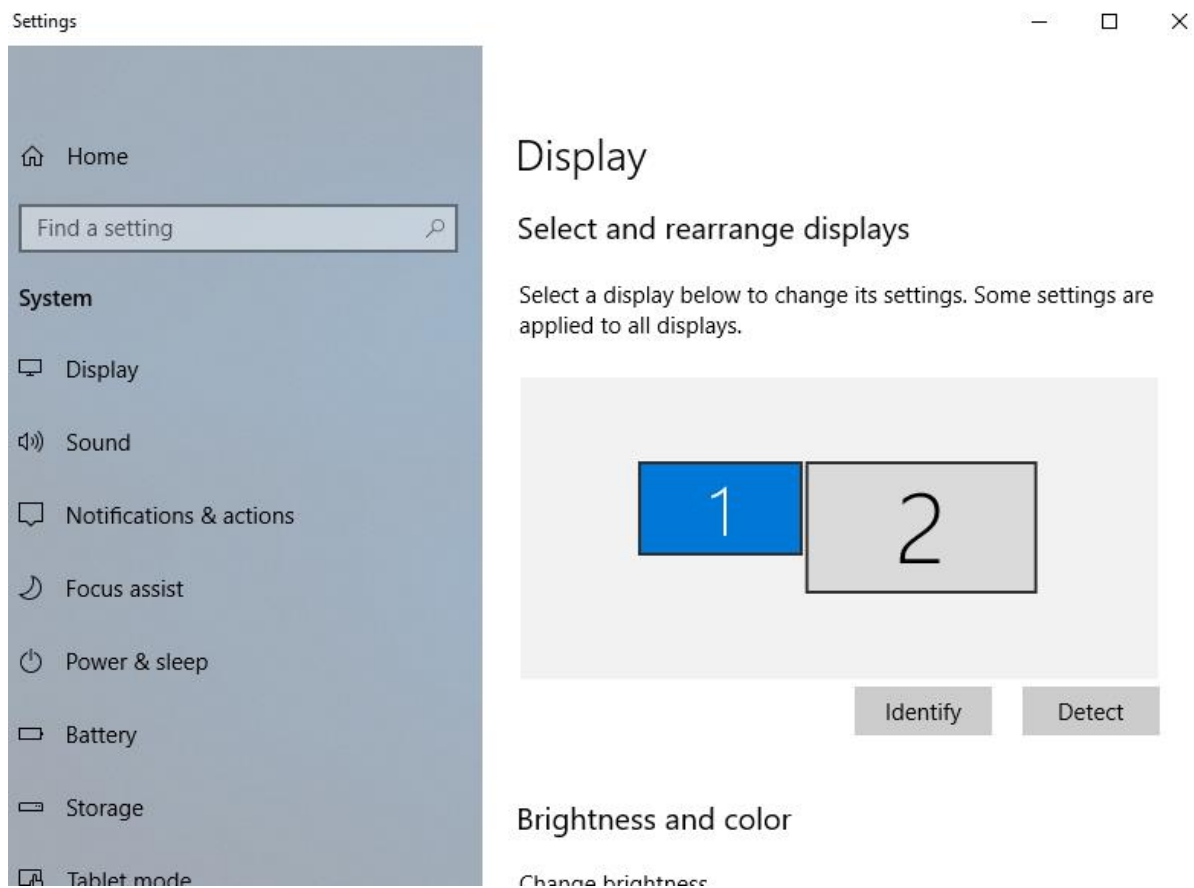


If you see this instead of two separate monitors:

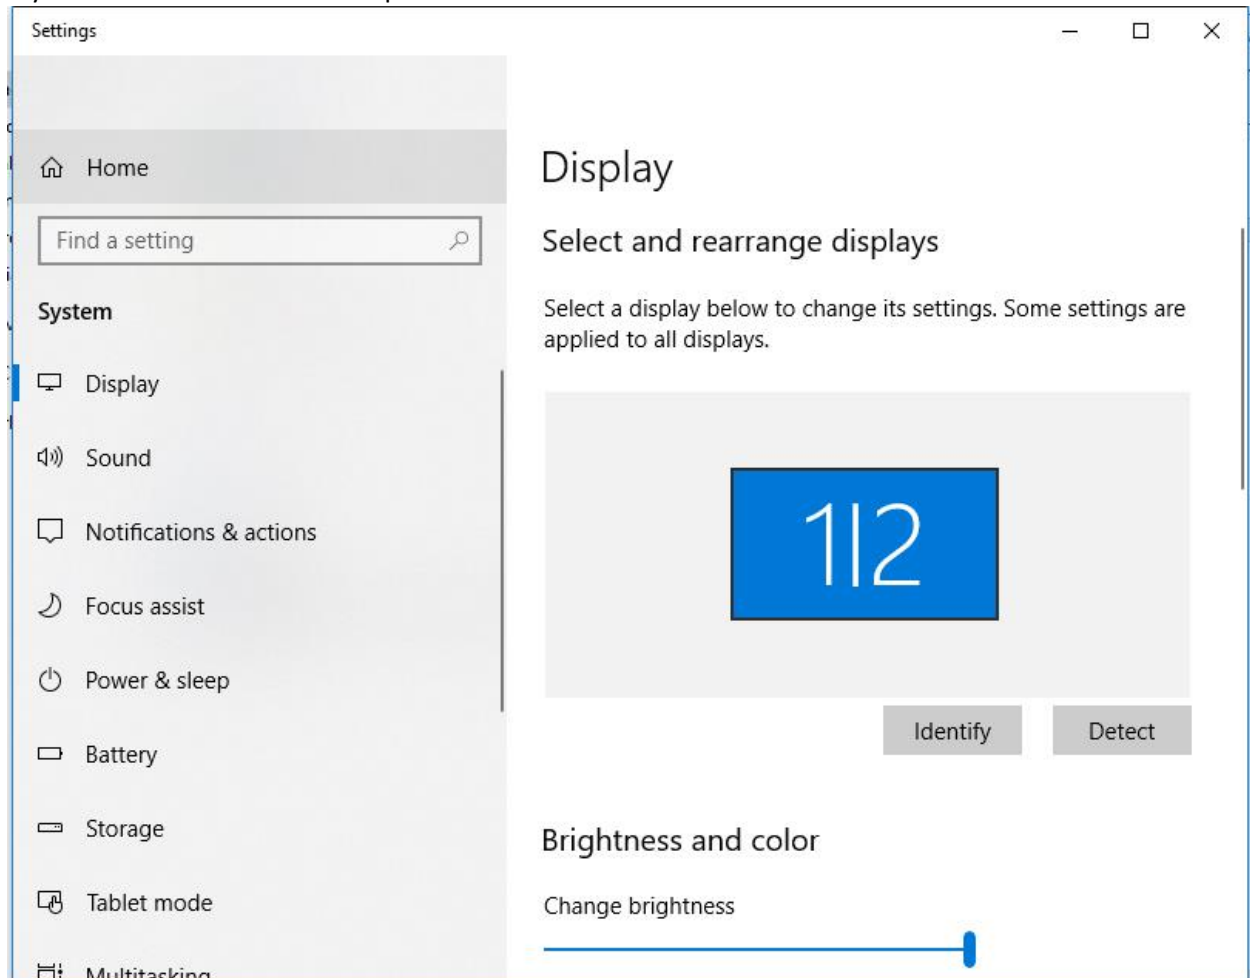


Then you need to scroll down and click on “Duplicate these Displays” and change it to “Extend these Displays”

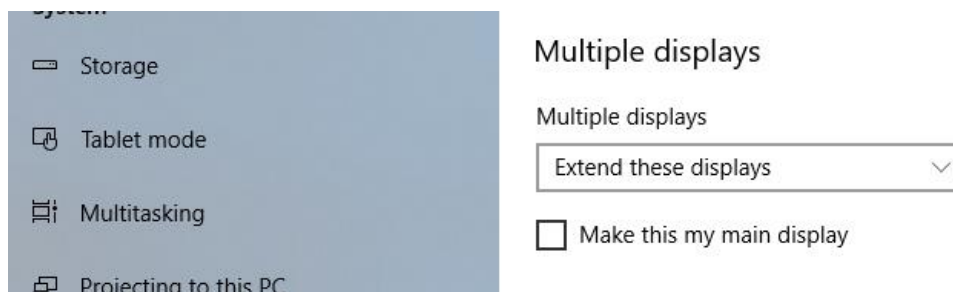

Next, click on 'identify' it will display a number on each monitor. Make note of which number appears on the smart TV. For this tutorial, we will assume that the number on your TV is 1. (Like below) If your display is #2, then simply click on the grey #2 box (it will turn blue when it's selected) Note that display #1 is selected below

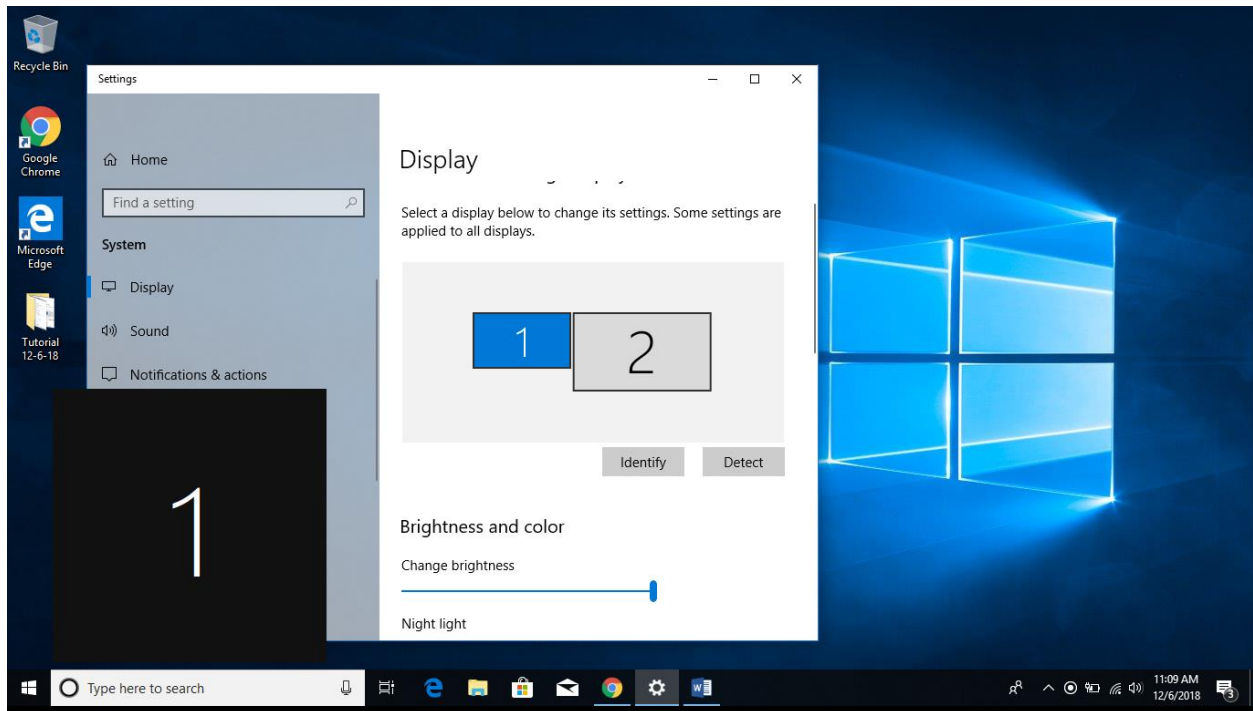

Anytime you have a touch input for a display, **it needs to be the main display**, otherwise Windows gets confused. So, in order to do that, simply scroll down until you see the checkbox to "Make this my main display"

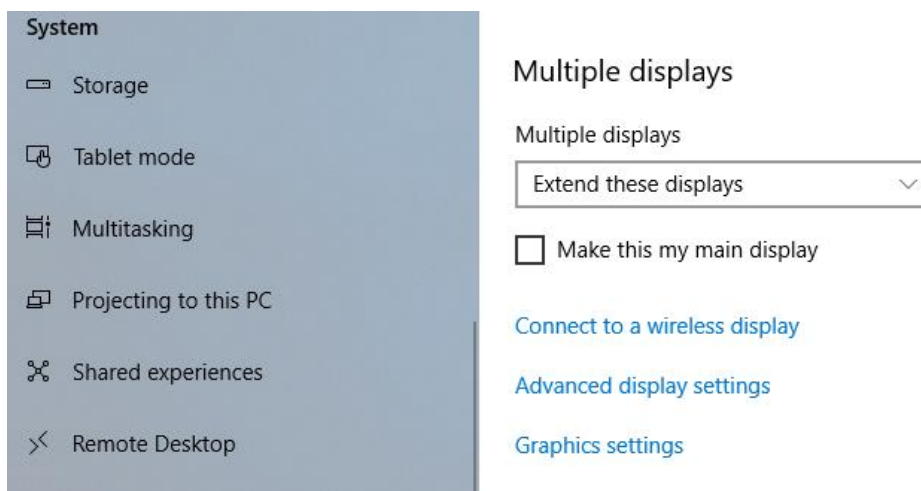

Windows may prompt you to keep changes or revert. Make sure you select keep changes.

You may also notice that if you change your main display that icons appear on the wrong monitor, simply drag them to the other monitor.

For Smart Boards recalibrate after doing this.

Smart TVs automatically calibrate.

